


## EAR CANAL TOOL METHODS OF USE

*The ear canal tool is a really easy tool to use. It is designed to stamp the inner ear canal, making a highly detailed impression into the base of the ear butt.*

### METHODS USED:

**Method 1)** Spray the ear canal tool with spray release (WD-40 works well) so that it does not stick to the epoxy or other material used in the ear. Now, fill the butt area of the earliner using clay, paper mache, or epoxy. Next, align the tool and press in removing the tool for a perfect impression!

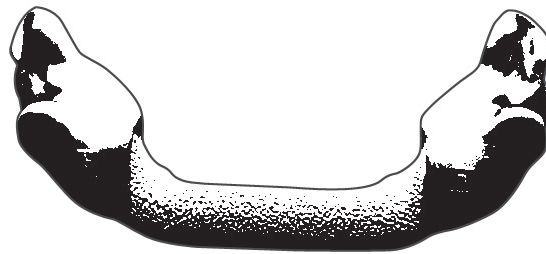

**Method 2)** Another method to try, take the ear canal tool, using Latex 74, paint 2-3 coats over the end of the tool. Or if you wish, just dip the tool in a bucket of latex. No release agent is needed with this method. Let the Latex cure, then peel off the ear canal "cups". Then trim off the excess Latex and feather the edge of the canal cup with scissors. These pre-made ear canals can be placed and glued into the ear butt of a mount ready to be finished. Latex is very flexible so these will work for most ear butt models. This process works so great and in return will save you time and money, because you can pre-make several ear canals for later use!

*Good luck, and we hope you enjoy the tool!*

## RESEARCH MANNIKINS

1-800-826-0654 • (541) 451-1538 OFFICE • (541) 451-5455 FAX

*"Your Hometown Taxidermy Supply Store"*